



GRAPHIPLEX®
PRÉSENTOIRS PLEXI POUR COLLECTIONNEURS

Composition :

2 montants

2 entretoises

1 entretoise marquée d'un point



Montage :


Ôtez le film de protection sur les 2 faces de chaque élément

Insérez les extrémités des 3 entretoises dans les fentes d'un montant, puis du second montant, en tenant compte du fait qu'une entretoise est différente et marquée d'un point (point à mettre en correspondance d'un point gravé sur le montant). puis glissez SANS FORCER les entretoises vers le bas pour les verrouiller.

Entretien:

Pour le lavage, du liquide vaisselle dilué dans de l'eau. N'utilisez pas de produits acides, solvants ou abrasifs.

Reportez-vous sur Internet pour plus d'informations sur le nettoyage en l'entretien du plexi, ou en grande surface de bricolage.

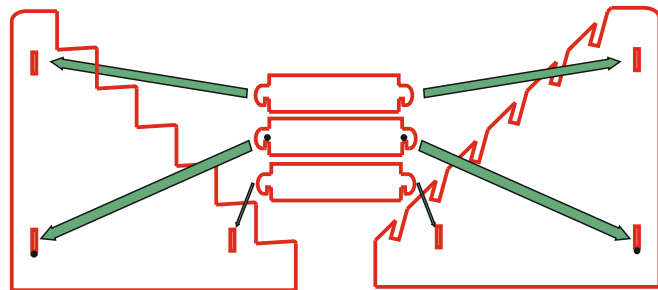



GRAPHIPLEX®
PRÉSENTOIRS PLEXI POUR COLLECTIONNEURS

Composition :

2 uprights

2 spacers

1 spacer marked with a dot



Assembly :

Remove the protective film on both sides of each element

Insert the ends of the 3 spacers into the slots of one upright, then the second upright, taking into account that a spacer is different and marked with a dot (point to be matched with a dot engraved on the upright)
. then GENTLY slide the spacers down to lock them.

Maintenance:

For washing, dishwashing liquid diluted in water. Do not use acidic products, solvents or abrasives.

Refer to the Internet for more information on cleaning and maintenance of plexi, or large DIY area.

Display stand for large knives ref. : Gc3, Gc4, Gc5, and Gc6

